

ASSEMBLY INSTRUCTIONS


P4 Bed hook supports

for P4 Base / Top / Synchro 2 / Synchro 4




Bedding Group

You can fit bed hook supports to P4 models Base / Top / Synchro 2 / Synchro 4.
As such, these bases are able to use the bed hooks of standard bed frames.

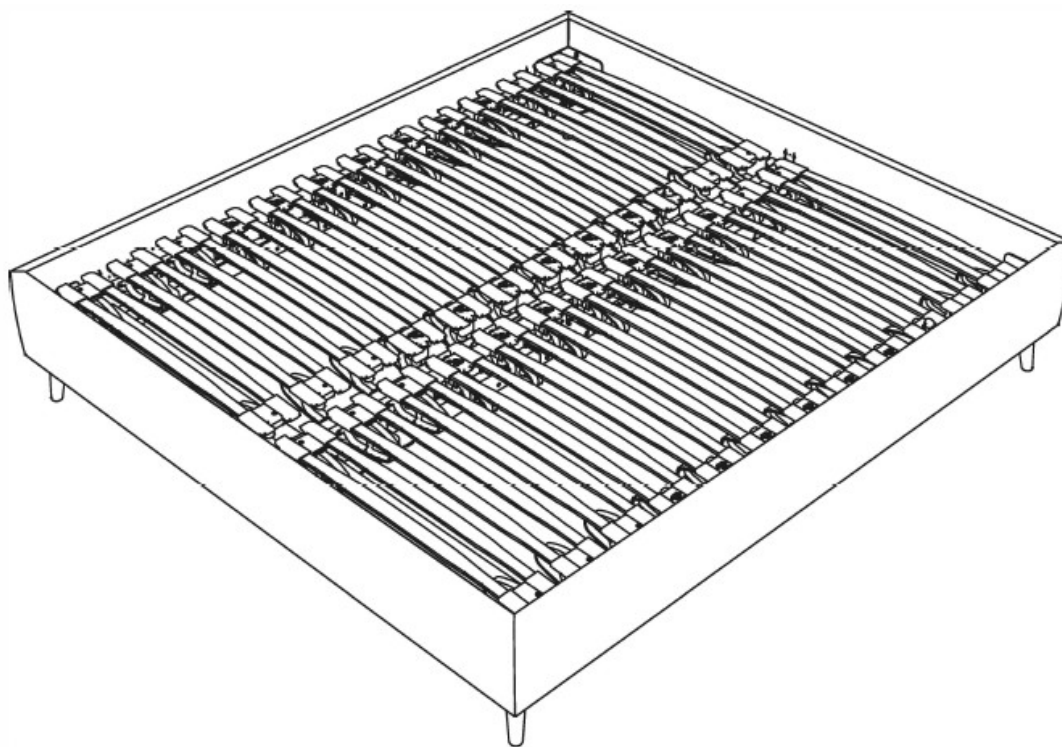

Step 1:


Attach the rubber strips as shown in the drawing.

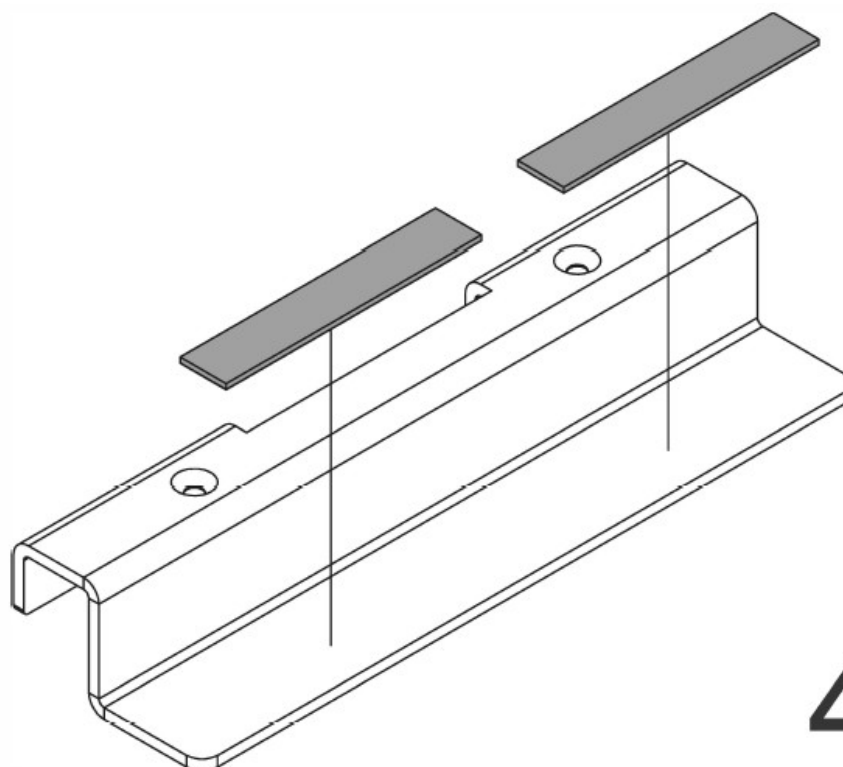

4 x

Step 2:

Use the two M6x16mm bolts to secure the bed hook support.

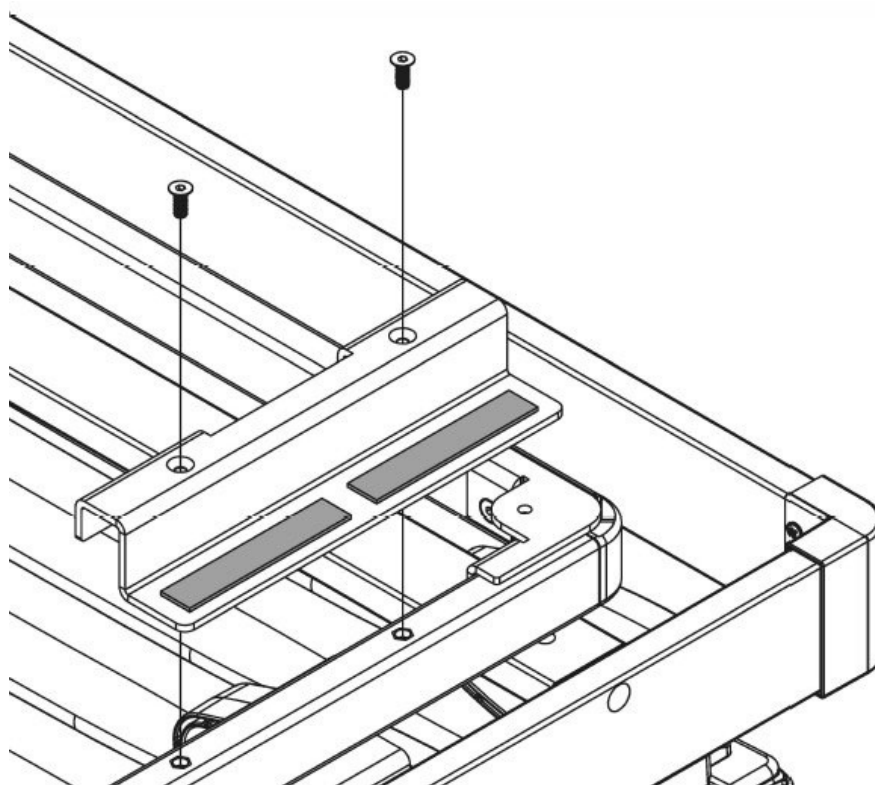

2x M6x16

Step 3:

Repeat step 2 at the positions indicated by the arrows.

